DESIGN + ENGINEERING GROHE GERMANY

99.0969.131/ÄM 247886/02.20

www.grohe.com













Installation Instructions

Flush piping system prior and after installation of fitting thoroughly!

This product must be installed in conformance with local codes e.g. AS/NZS 3500 series of standard!

The hot water temperature must be controlled by a Watermark certified tempering valve, or other suitable certified thermostatic mixing valve.

Installation and connection, see Figs [1] to [6].

Refer to the dimensional drawings.

PLEASE NOTE:

For 32962 face of noggins need to be positioned a minimum of 50mm and a maximum of 62mm from where the unfinished wall surface will end up.

For 32963 face of noggins need to be positioned a minimum of 74mm and a maximum of 86mm from where the unfinished wall surface will end up.

Ensure that the cartridge and cream coloured cartridge disc are installed to the front of plaster and/or acrylic liner to prevent leaks running back into wall!

Note:

When installing concealed mixer body, please note it must be mounted onto timber or solid walls using appropriate reinforcement to ensure sufficient strength.

Open cold and hot water supply and check connections for leakage!

Specifications

- Flow pressure min. 50 kPa recommended 100 500 kPa
- Operating pressure max. 500 kPa
- Test pressure
 1600 kPa

If static pressure is greater than 500 kPa, fit pressure reducer. Avoid major pressure differences between hot and cold water supply.

• Flow rate at 300 kPa flow pressure approx. 27 L/min

Temperature

Hot water inlet:	(maximum) 70 °C
Recommended:	(energy saving) 60 °C
Thermal disinfection possible	
Water connection	cold - right hot - left

Static pressure testing instruction

In closed position, increase water pressure to 1600 kPa. Test for a minimum of 30 minutes and a maximum of 60 minutes. Inspect product for any leaks or deformations.

If cartridge leaks, replace full cartridge immediately and re-test for leaks!

Reduce pressure down to 500 kPa.

Important notes:

- If static pressure testing the outlet pipe to the shower head is required, mixer must be isolated (in closed position) and bypassed for the duration of the test.
- Never install shut-off valves in the outlet pipe (mixed water) downstream of any built-in mixer.

AUS

Reece Australia Pty Ltd 118 Burwood Hwy Burwood VIC 3125

Tel.: +61 3 9274 0000 Email: admin@reece.com.au



NZ

Robertson 25 Vestey Drive Mt Wellington, Auckland

Tel.: +64 9 5730490 Email: sales@robertson.co.nz